

## SteriWare® ViscoThief

## Single Use Sampler for High Viscosity Liquids

The Disposable ViscoThief is ideal for sampling viscous materials such as oils, creams, shampoo and honey.


Simple to operate. Takes a sample within seconds.


- Assembled & Packed in a Cleanroom
- Individually Bagged
- Made from FDA, EC 1935/2004 & EU 10/2011 conforming materials
- BSE/TSE Free
- · Full Batch Traceability
- Suitable for use in ATEX areas (500mm and 1000mm lengths only)
- Ergonomic handle
- Available sterile (SAL 10<sup>-6</sup>) and non-sterile

## Operation:

- 1. Insert the sampler into the product
- At the required depth pull up the handle. The sample will be drawn into the sampler
- 3. Withdraw sampler
- 4. Push down handle to expel the sample

Note: The further the handle is pulled the greater the sample volume  $% \left( 1\right) =\left( 1\right) \left( 1\right$ 

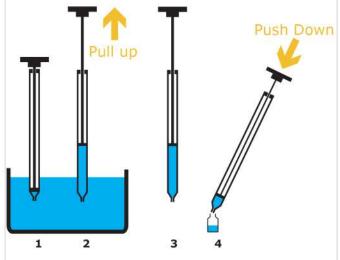

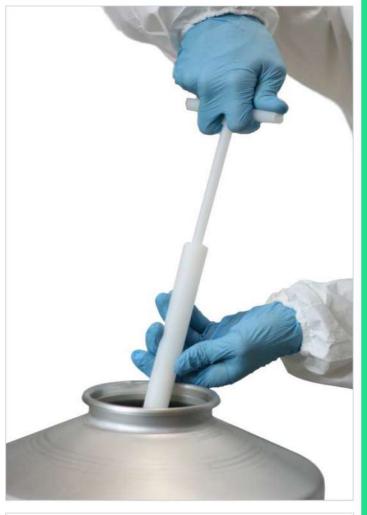





Part No.	Nominal Length	Sterile	Max. Sample Volume	Diameter of Hole in Tip	Outer Diameter	Material	Quantity per Box
8055H-500	500mm	No	100ml	10ml	21mm	HDPE	20
8055H-500S	500mm	Yes	100ml	10ml	21mm	HDPE	20
8055H-1000	1000mm	No	190ml	10ml	21mm	HDPE	20
8055H-1000S	1000mm	Yes	190ml	10ml	21mm	HDPE	20
8055H-1500	1500mm	No	300ml	10ml	21mm	HDPE	20
8055H-1500S	1500mm	Yes*	300ml	10ml	21mm	HDPE	20
8055P-500	500mm	No	100ml	10ml	21mm	PP	20
8055P-1000	1000mm	No	190ml	10ml	21mm	PP	20

For low viscosity liquids such as water use the LiquiThief (see page 49)

<sup>\* 8055</sup>H-1500S samplers are sterilised by Electron Beam